

Emergency Situations  
Call Unitywater:  
1300 086 489

This information on this plan is valid  
for 30 days from "Printed On" date.

Extent of Unitywater Area

Water

Water Pump Station

Water Service

Water Valve

Water Pipe (Abandoned)

Water Hydrant

Water Fitting

Water Main

Trunk Main

Reticulation Main

Sewer

Sewer Pump Station

Sewer Maintenance Hole

Sewer Valve

Sewer Fitting

Sewer Gravity Main

Trunk Main

Reticulation Main

Overflow Main

Sewer Pipe (Abandoned)

Sewer Pressure Main

Pressure Sewer

Rising Main

Vacuum Main

Pressure Sewer Service

Sewer Service

Recycled Water

Recycled Water Pump Station

Recycled Water Valve

Recycled Water Hydrant

Recycled Water Fitting

Recycled Water Pipe (Abandoned)

Recycled Water Main

Map Tile: 1  
Scale: 1:1000  
(If printed at 100%  
on A3 size paper)



Unitywater

Before You Dig Australia  
Geospatial Information Systems  
Ground Floor, 33 King St  
Caboolture QLD 4510

Inquiries: 1300 0 Unity (1300 086 489)  
Email: dbyd@unitywater.com

Disclaimer

These Maps are supplied under the following conditions:-  
Mapping details are supplied from information contained in Unitywater's records which may have been furnished to Unitywater by other persons. Unitywater gives no warranty or guarantee of any kind, expressed, implied, or statutory, to the correctness or accuracy of the map details or the degree of compliance with any standards in this matter. Persons making decisions with financial or legal implications must not rely upon the map details shown on this plan for the purpose of determining whether any particular facts or circumstances exist and Unitywater (and its officers and agents) expressly disclaim responsibility for any loss or damage suffered as a result of placing reliance upon this information.

